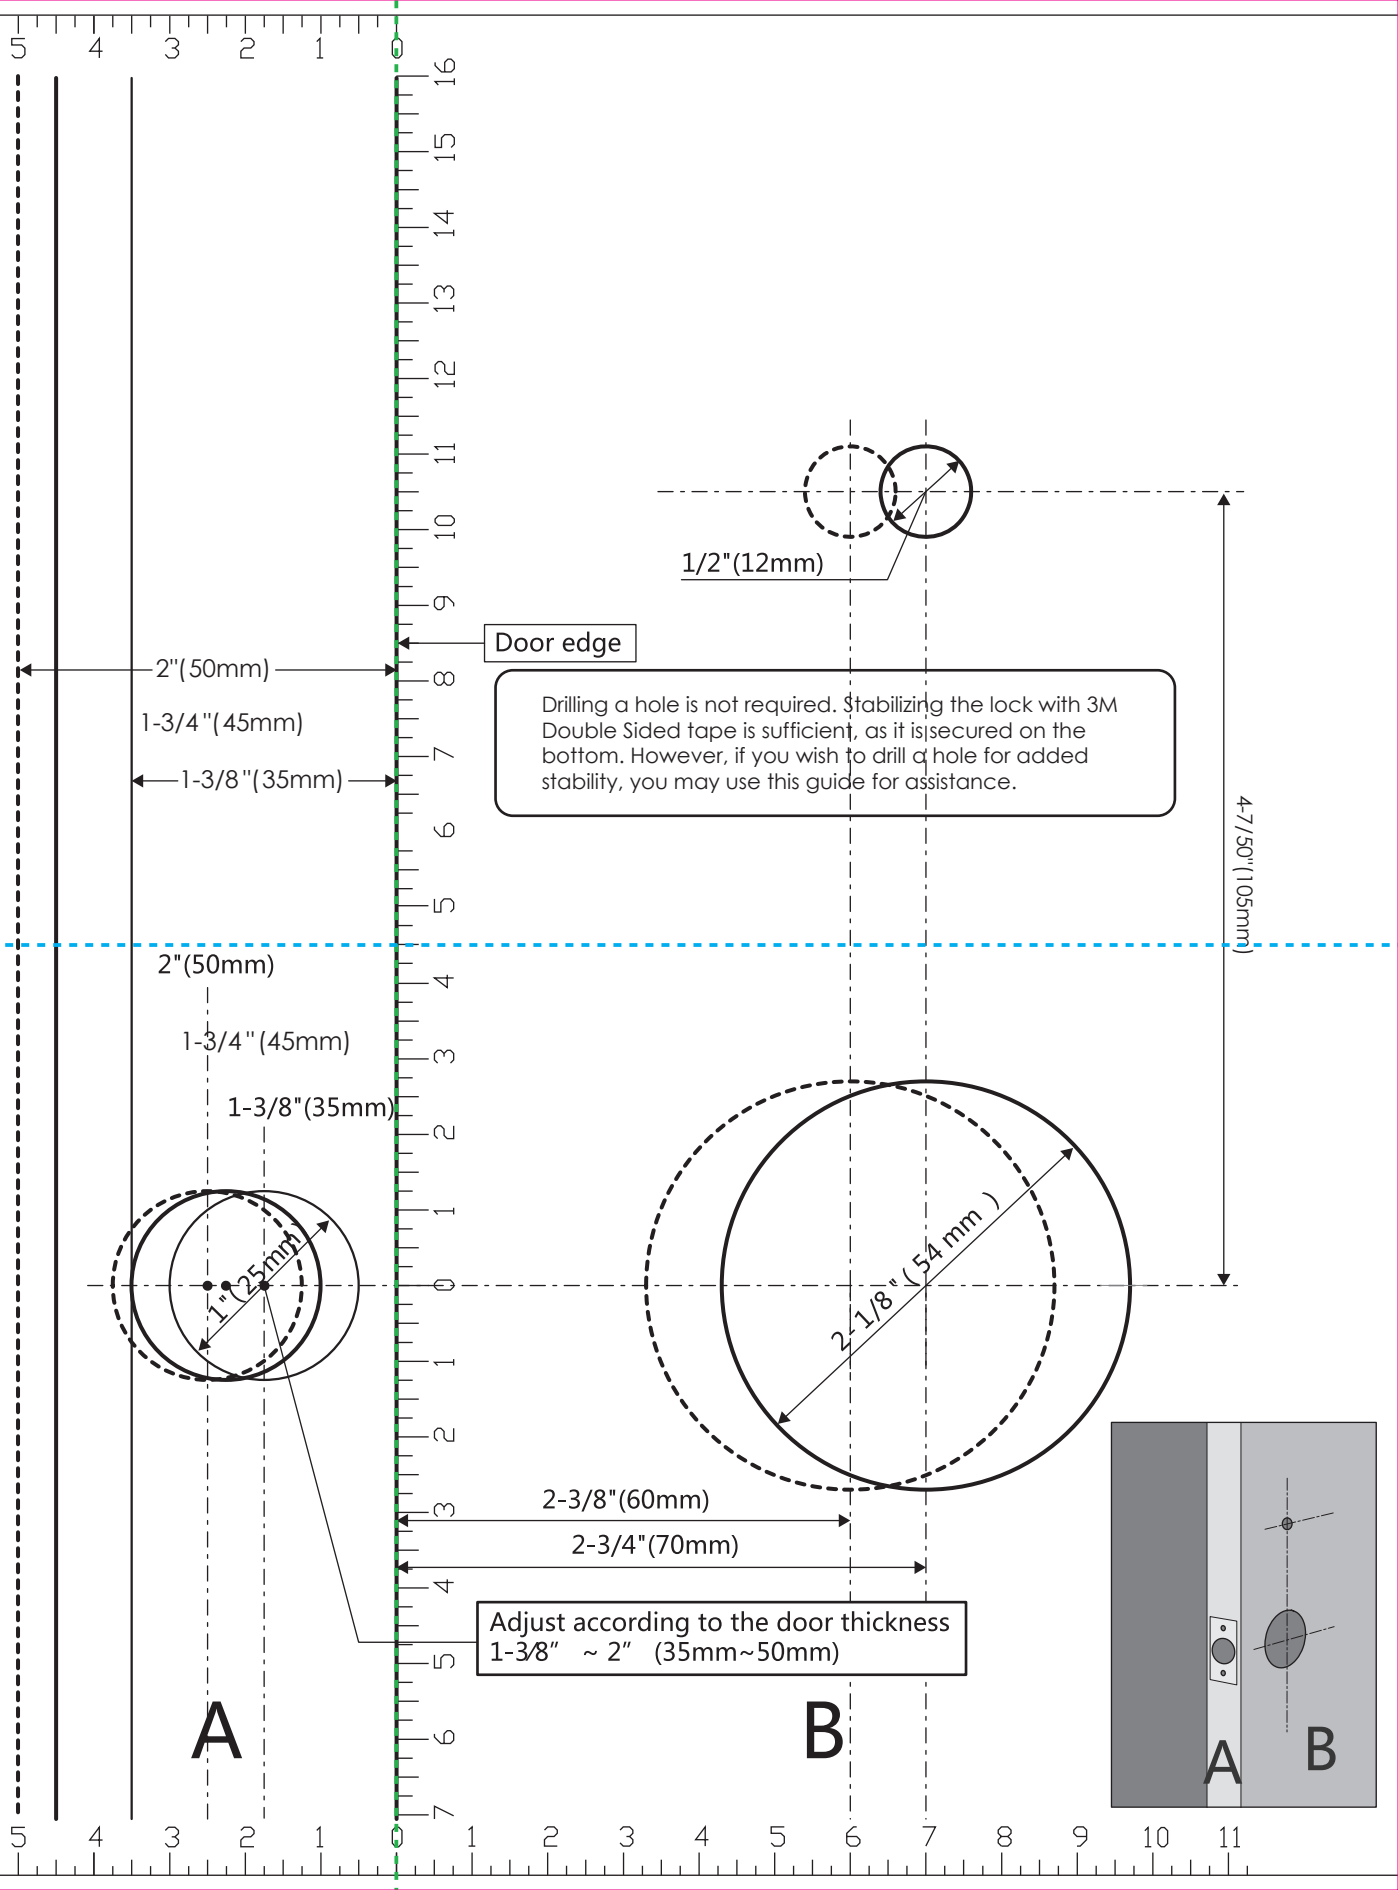
1/2"(12mm)
Door edge
2"(50mm)
1-3/4"(45mm)
1-3/8"(35mm)
Drilling a hole is not required. Stabilizing the lock with 3M Double Sided tape is sufficient, as it is secured on the bottom. However, if you wish to drill a hole for added stability, you may use this guide for assistance.
4-7/50"(105mm)
2"(50mm)
1-3/4"(45mm)
1-3/8"(35mm)
1"(25mm)
2-1/8"(54mm)
2-3/8"(60mm)
2-3/4"(70mm)
Adjust according to the door thickness
1-3/8" ~ 2" (35mm~50mm)
A
B
A
B
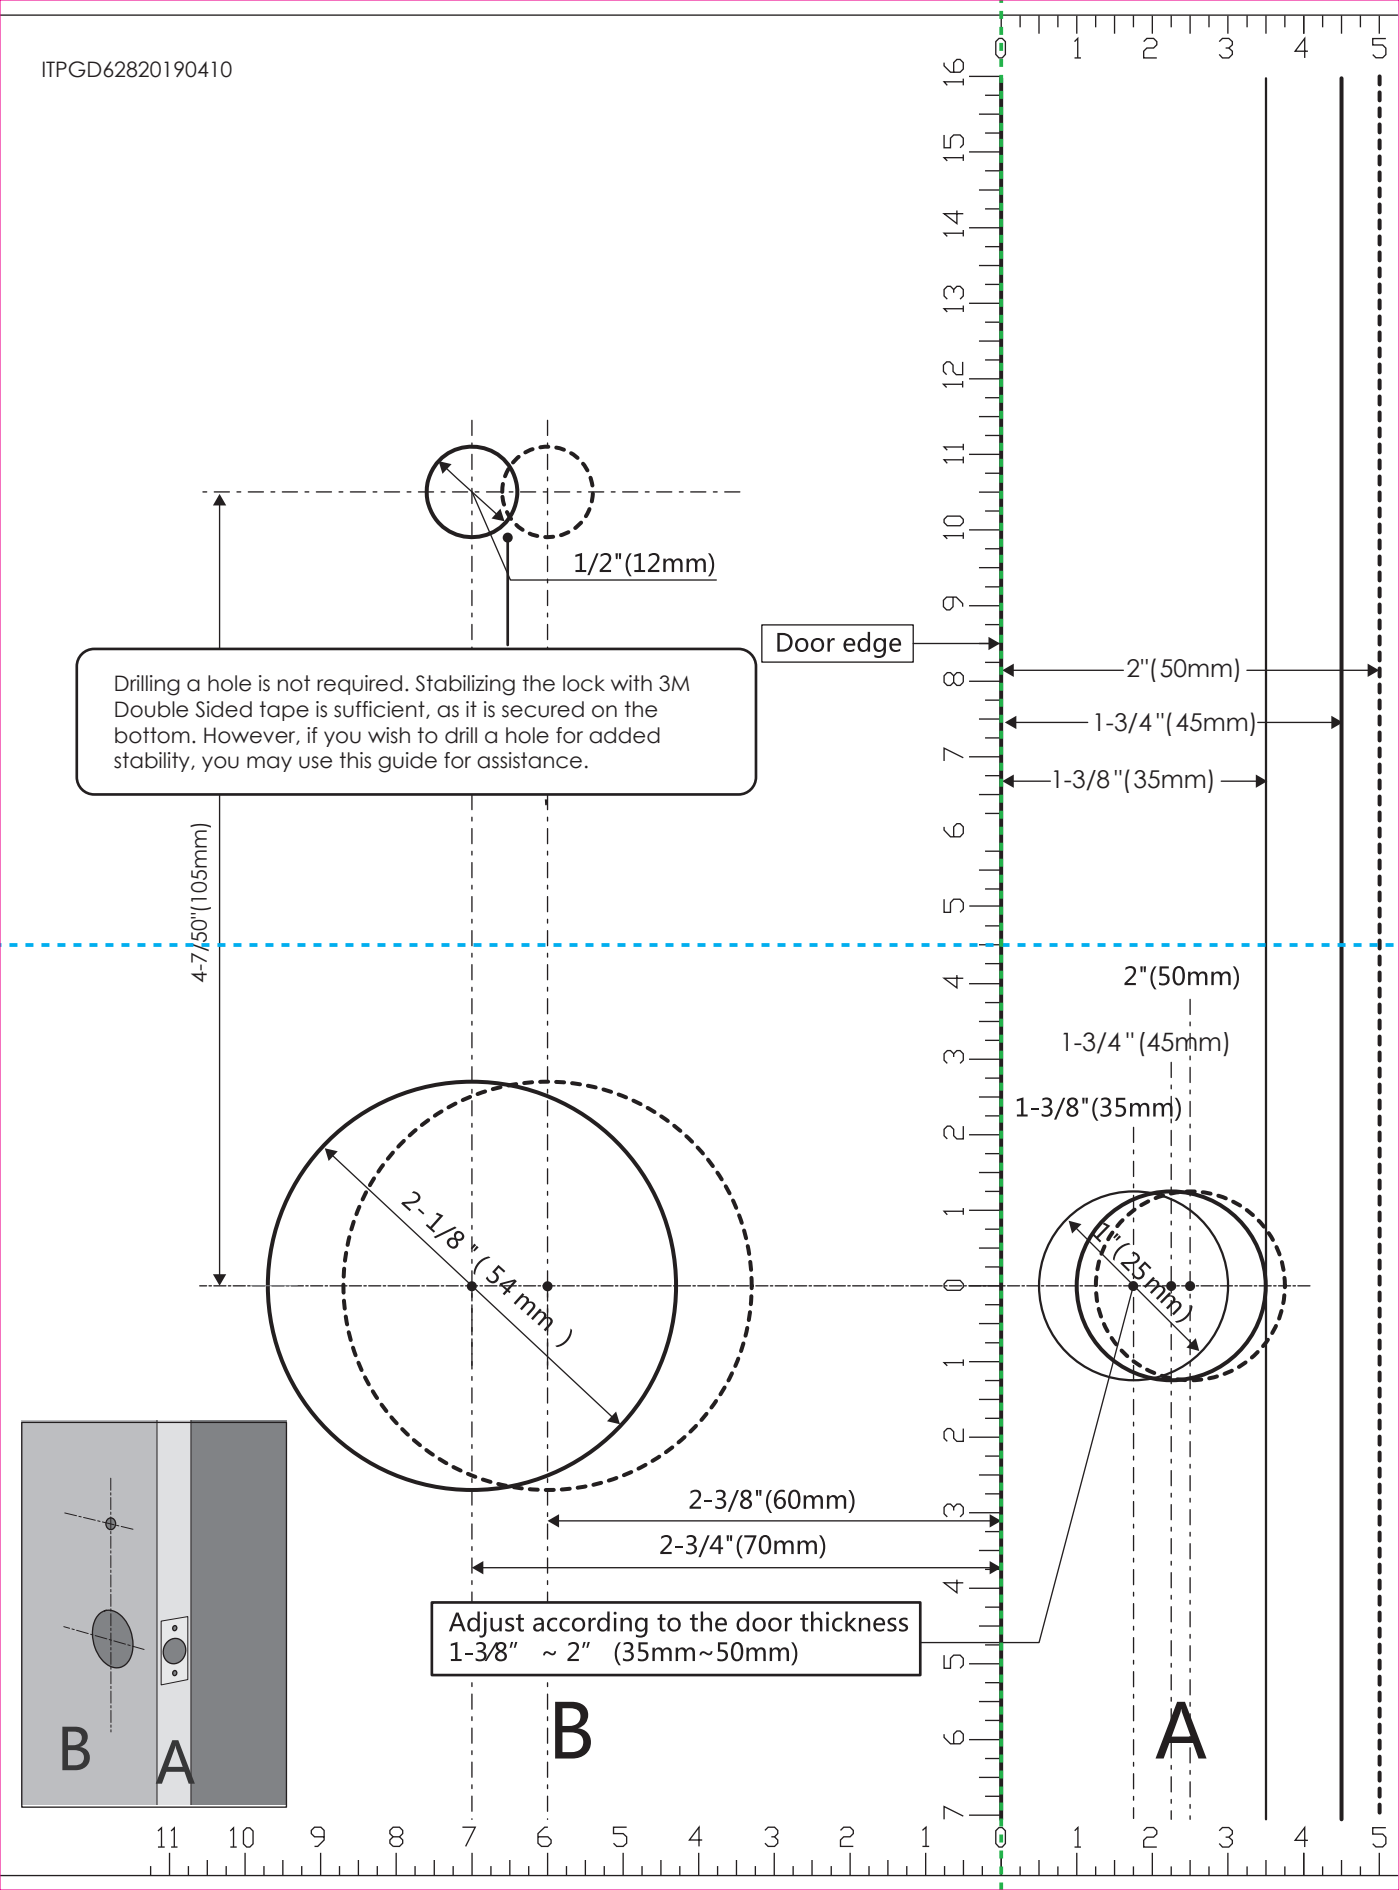
ITPGD62820190410